

Product	Model	Data	Issue Date
CAST-A-DAPTER	All	Installation Instructions	May 2008

NOTE: CAST-A-DAPTER is manufactured for specific pipe diameters. Make sure that the CAST-A-DAPTER supplied is for the correct pipe sizes.



CAST-A-DAPTER with IDENTIFICATION LABEL and SPACER PLUG



SPACER PLUG separated from CAST-A-DAPTER



1. Insert pipe through CAST-A-DAPTER



2. Place SPACER PLUG in proper location between the pipes on outside of tank.



3. Secure the SPACER PLUG in place with a few wraps of heavy tape. This aligns the pipes and prevents them from spreading during backfill.



4. Insert the assembled CAST-A-DAPTER through the CAST-A-SEAL® 402 and carefully align the CAST-A-DAPTER with the outside edge of the CAS 402. Tighten clamp to 60 in/lbs using a torque-limiting wrench.

Press-Seal believes all information is accurate as of its publication date. Information, specifications, and prices are all subject to change without notice. Press-Seal is not responsible for any inadvertent errors. Copyright 2008



PRESS-SEAL GASKET CORPORATION
Fort Wayne, Indiana USA

Providing Products and Services That Protect Our Planet's Clean Water Supply

800-348-7325 Fax (260) 436-1908
email: sales@press-seal.com
web: www.press-seal.com

