

REMOVING THE EXISTING WRENCH HEAD

1. Insert small object into hole of wrench head and push the pin down. (at loc. A shown below) Then slide off the old wrench head.



2. Speed notch needs to be on the right hand side.

4. Slide the wrench head onto the handle (from right to left or left to right) while pushing the pin down. Spring loaded pin will click when the wrench head is properly installed.



3. Place the wrench head on the handle, with speed notch to the right side. Torque arrow should be pointing left.