


TO INSTALL GASKET INTO MANHOLE


1. Install gasket by squeezing into a heart shape and inserting into hole from outside of manhole.
2. Smooth gasket around hole by working any excess rubber around the hole until gasket lies flat against hole ID.
3. Push gasket lip back into hole until it bottoms completely around hole.

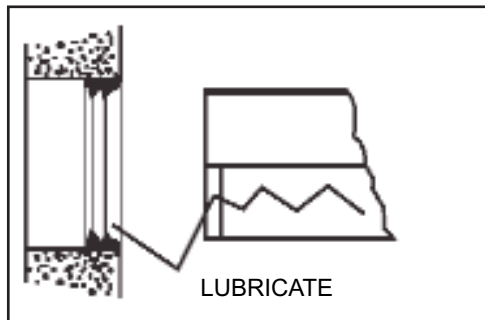


TO INSTALL PIPE INTO GASKET

1. Make sure that pipe end is clean and well-beveled for at least 3/4" from end all around.
2. Apply lubricant generously to pipe and to fins of installed gasket. Make sure that entire pipe is lubricated for at least 15" from end.

NOTE: DO NOT apply any lubricant between gasket and concrete.

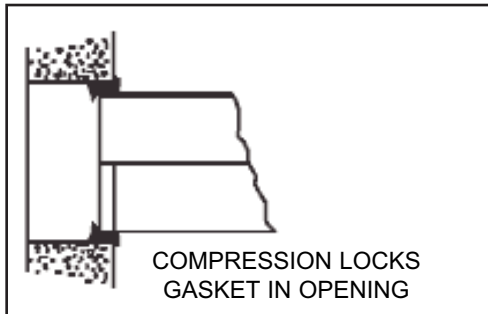

3. Center pipe carefully in gasket and begin to push inward. Push straight into hole. Installation pressure will drop slightly after first fin is cleared. This locks gasket into the hole.
4. Continue pushing, and pressure will increase until pipe end clears gasket completely.

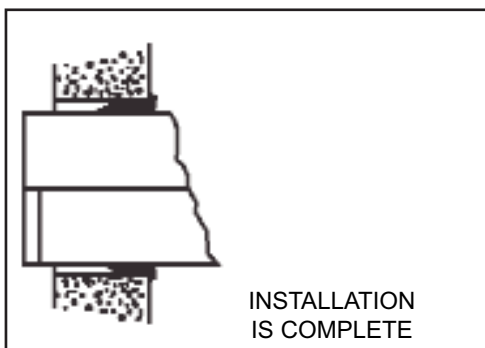

5. Move pipe inward until it clears interior plane of manhole wall. Move pipe to proper elevation and angle. Installation is now complete.

Press-Seal believes all information is accurate as of its publication date. Information, specifications, and prices are all subject to change without notice. Press-Seal is not responsible for any inadvertent errors. Copyright 2010.

